



XLE & XLT OCS DATASHEET



XLE MODEL

MODEL 3 12 DC In, 12 DC Out, 2 - 12-bit Analog In

XLT MODEL

1 TECHNICAL SPECIFICATIONS

1.1 General		
Typical power-back- light 100%	164mA @ 10V (1.64W) 116mA @ 24V (2.77W)	
Power Backlight Off	-15mA @ 24V (0.36W)	
Power Ethernet Models	+35mA @ 10V (0.35W) +20mA @ 24V (0.48W)	
Inrush Current	30A for < 1mS	
Primary Pwr. Range	10-30VDC	
Real Time Clock	Yes, battery backed; lithium coin cell CR2450	
Clock Accuracy	+/- 90 Secs/Month	
Relative Humidity	5 to 95% Non-condensing	
Operating Temp.	-10°C to +60°C	
Storage Temp.	-20°C to +70°C	
Weight	0.75 lbs/340g (without I/O)	
Certifications (UL/CE)	USA: https://hornerauto- mation.com/certifications/ Europe: http://www. horner-apg.com/en/support/ certification.aspx	

1.3 Connectivity			
Serial Ports	RS-232 full handshaking or RS-485 half duplex on first Modular Jack (MJ1) RS-232 or RS-485 on second Modular Jack (MJ2)		
USB mini-B	Programming only		
CAN	1 x CAN Port, Isolated 1KV		
CAN Protocols	CsCAN, CANopen, DeviceNet, J1939		
Ethernet	Ethernet versions only		
Ethernet Protocols	TCP/IP, Modbus TCP, FTP, SRTP, EGD, ICMP, ASCII		
Remote I/O	SmartRail, SmartStix, SmartBlock, SmartMod		
Removable Memory	MicroSD (SDHC, SDXC IN FAT32 format, support for 32GB max. Application Updates, Datalogging, more		
Audio (XLt only)	Beeper, System or Software Controlled		

1.4 Control & Logic	1.4 Control & Logic				
Control Lang. Support	Advanced Ladder Logic Full IEC 61131-3 Languages				
Logic Program Size	256KB				
Scan Rate	0.7 mS/K logic (XLe) 0.8 mS/K logic (XLt)				
Digital Inputs	2048				
Digital Outputs	2048				
Analog Inputs	512				
Analog Outputs	512				
Gen. Purpose Registers	9,999 (words) Retentive 2,048 (bits) Retentive 2,048 (bits) Non-retentive				

1.2 User Interface				
Display Type	Transflective LCD (outdoor readable)			
Resolution	128 x 64 pixels (XLe) 160 x 128 pixels (XLt)			
Color	Monochrome			
Built-In Storage	16MB			
User-Program. Screens	1023 max 50 Objects per page			
Backlight	LED			
Backlight Lifetime	30,000+hrs			
Brightness Control	0-100%(XIt) On/Off(X- le) via system register			
Screen Update Rate	Program dependant			
Number of Keys	20 (XLe) 5 (XLt)			
Touchscreen (XLt)	Resistive 1,000,000+ touch life			
·				

1.5 Inputs/Outputs								
Model	DC In	DC Out	Relays	HS In	HS Out	mA/V In	mA/V RTD/T	mA/V Out
Model 0	-	-	-	-	-	-	-	-
Model 2	12	-	6	4	-	4	-	-
Model 3	12	12	-	4	2	2	-	-
Model 4	24	16	-	4	2	2	-	-
Model 5	12	12	-	4	2	-	2	2
Model 6	12	12	-	4	2	-	6	4

There are 4 high-speed inputs of the total DC Inputs. There are 2 high-speed outputs of the total DC outputs. Model 2, 3 & 4 feature 12-bit Analog Inputs. Model 5 features 14/16-bit Analog Inputs. High-speed Outputs can be used for PWM and Pulse Train Outputs, currently limited to <10kHz. (Model 6 limited to <65kHz). Model 6 features a 16 bit Analog Input.

High-Speed Inputs		
Number of Counters	4	
Maximum Frequency	500 kHz each	
Accumulator Size	32-bits each	
Modes Supported	Totalizer, quadrature, pulse measurement, frequency measurement, set-point controllled outputs	

High-Speed Outputs			
Stepper, PWM			


page 1 of 5



technical specifications continued...

1.6 Digital DC Inputs				
Inputs per Module	12 Including 4 Configurable HSC Inputs			
Commons per Module		1		
Input Voltage Range	12 VDC	/ 24 VDC		
Absolute Max. Voltage	35 VD	C Max.		
Input Impedance	10	kΩ		
Input Current: Upper Threshold Lower Threshold	Positive Logic: 0.8 mA 0.3 mA	Negative Logic: -1.6 mA -2.1 mA		
Max. Upper Threshold	8 \	/DC		
Min. Lower Threshold	3 \	/DC		
OFF to ON Response	11	mS		
ON to OFF Response	1 mS			
High Speed Counter Max Freq*	500) kHz		

^{*}See I/O info below for detail regarding HSC and PWM

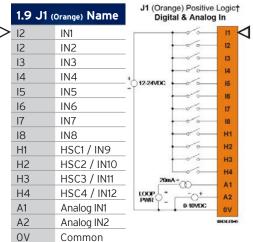


	1.10 J2	(Black) Name	J2 Black Positive Logic Digital Out		
1	OV	Common	_)V	
	V+	V+	10 - 30VDC	/+	
	NC	No Connect	- LOAD + C	13	
	Q12	OUT 12	+ toAD +	112	
ĺ	Q11	OUT 11	TOAD +	111	
ı	Q10	OUT 10		10	
ı	Q9	OUT 9		29	
ı	Q8	OUT 8		28	
ı	Q7	OUT 7		26	
ı	Q6	OUT 6	- 1	25	
ı	Q5	OUT 5	- LOAD +	24	
İ	Q4	OUT 4	- LOAD +	13	
İ	Q3	OUT 3	- TOAD +	22	
İ	Q2	OUT2/PWM2	LOAD	21	
i	Q1	OUT1/PWM1	00420	F92	

 \triangleright

1.7 Digital DC Outputs			
12 Including 2 Config- urable PWM Outputs			
1			
Sourcing / 10 k Ω Pull-Down			
28 VDC Max.			
Short Circuit			
0.5 A			
4 A Continuous			
30 VDC			
10 VDC			
0.25 VDC			
650 mA per Channel			
None			
1 mS			
1 mS			
10 kHz			
Current Sourcing (Pos. Logic)			

Wiring Details:
Solid/Stranded wire - 12-24 awg (2.5-0.2mm ²).
Strip length - 0.28" (7mm).
Torque rating: 4.5 - 7 lb-in (0.50 - 0.78 N-m).

1.8 Analog Outputs					
Number of Channels	2				
Input Ranges Safe Input Range Input Impedance (Clamped @ -0.5 VDC to 12 VDC)	0 - 10 VDC 0 - 20 mA 4 - 20 mA -0.5 V to +12V Current Mode: 100Ω Voltage Mode: 500Ω				
Nominal Resolution %AI full scale Max. Over-Current	10 Bits 32,000 counts 35 mA				
Conversion Speed	All channels converted once per ladder scan				
Max. Error @25° C (excluding zero)	4-20 mA 1.00% 0-20 mA 1.00% 0-10 VDC 0.50%				
Filtering	160 Hz hash (noise) filter 1-128 scan digital running average filter				

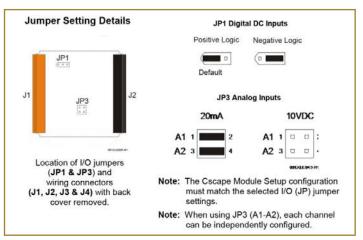

page 2 of 5



2 WIRING & CONNECTORS

2.1 - Port Connectors












- Function Keys
- Touchscreen
- Navigation Keys
- USB Mini-B Port
- High Capacity microSD Slot RS232/RS485 Serial Ports (2)
- Wide-Range DC Power
- 8. CAN Port
- Ethernet LAN Port (optional)
- 10. Optional Built-In I/O
- 11. Configuration Switches
 12. Mounting Clip Locations
- 13. DIN Rail Člip
- 14. Softkeys





3 COMMUNICATIONS


3.1 - CAN Communications

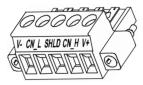

CAN Solid/Stranded wire; 12-24 awg (2.5-0.2mm). Strip length - 0.28" (7mm). Locking spring-clamp, twoterminators per conductor. Torque Rating: 4.5 lb-in (0.50 N-m). V+ pin is not internally connected, the SHLD pin is connected to Earth ground via a 1 $M\Omega$ resistor and 10 nF capacitor.

CAN Pin Assignments					
PIN	SIGNAL	DESCRIPTION	DIRECTION		
1	V-	CAN Ground - Black	-		
2	CN L	CAN Data Low - Blue	IN/OUT		
3	SHLD	Shield Ground - None	-		
4	CN H	CAN Data High - White	IN/OUT		
5	V+ (NC)	No Connect - Red	-		

3.2 - Serial Communications

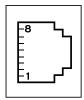


MJ1: RS-232 w/full handshaking or RS-485 halfduplex

RS-485 termination via switches; biasing via software

MJ1 PINS				
PIN	SIGNAL	DIRECTION		
8	TXD	OUT		
7	RXD	IN		
6	OV	GROUND		
5	+5V at 60mA	OUT		
4	RTS	OUT		
3	CTS	IN		
2	RX-/TX-	IN/OUT		
1	RX+/TX+	IN/OUT		

2.2 - Power Wiring

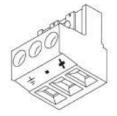

	Primary Power Port Pins				
	PIN	SIGNAL	DESCRIPTION		
	1	I Ground Frame Ground			
	2 DC-		Input Power Supply Ground		
3 DC+		DC+	Input Power Supply Voltage		

DC Input / Frame

Solid/Stranded wire; 12-24 awg (2.5-0.2mm). Strip length - 0.28" (7mm). Torque rating: 4.5 - 7 lb-in (0.50 - 0.78 N-m).

DC- is internally connected to I/O V-, but is isolated from CAN V-.

A Class 2 power supply must be used.



MJ2 SERIAL PORT

MJ2: RS-232 or RS-485 half or full-duplex, software selectable

RS-485 termination via switches; biasing via software

MJ2 PINS			
PIN	SIGNAL	DIRECTION	
8	232 TXD	OUT	
7	232 RXD	IN	
6	0 V	Ground	
5	+5V@60mA	OUT	
4	485 TX-	OUT	
3	485 TX+	OUT	
2	485 RX- or RX/TX-	IN or IN/OUT	
1	485 RX+ or RX/TX+	IN or IN/OUT	


page 3 of 5

communications continued on next page...



communications continued...


3.4 - Dip Switches

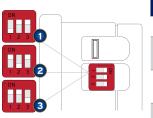

1.9	DIP SWITCHES			
PIN	NAME	FUNCTION	DEFAULT	
1	MJ1 RS-485 Termination	ON = Terminated	OFF	
2	MJ2 RS-485 Termination	ON = Terminated	OFF	
3	Bootload	Always Off	OFF	

The DIP switches are used to provide a built-in termination to both the MJ1 port and MJ2 port if needed. The termination for these ports should only be used if this device is located at either end of the multidrop/daisychained RS-485 network.

3.5 - Ethernet Communications

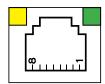

Green LED indicates link - when illuminated, data communication is available.

Yellow LED indicates activity - when flashing, data is in transmission.

4 BUILT-IN I/O

4.1 - 5. Built-in I/O (Model 2, 3, 4, 5 & 6)


All XLe and XLt models (except model 0) feature built-in I/O. The I/O is mapped into OCS Register space, in three separate areas - Digital/Analog I/O, High-Speed Counter I/O, and High-speed Output I/O. Digital/Analog I/O location is fixed starting at 1, but the High- speed Counter and Highspeed Output references may be mapped to any open register location. For more details on using the High-Speed Counter and High-Speed Outputs, see the XLe/XLt OCS User's Manual (MAN0878).

FIXED ADDRESS	DIGITAL/ ANALOG I/O FUNCTION	MODEL 2	MODEL 3	MODEL 4	MODEL 5	MODEL 6
	Digital Inputs	1-12	1-12	1-24	1-12	1-12
%I	Reserved	13-32	13-31	25-31	13-31	13-31
	ESCP Alarm	n/a	32	32	32	32
0/ 0	Digital Outputs	1-6	1-12	1-16	1-12	1-12
%Q	Reserved	7-24	13-24	17-24	13-24	13-24
0/ 41	Analog Inputs	1-4	1-2	1-2	1-2	1-4; 33-38
%AI	Reserved	5-12	3-12	3-12	3-12	n/a1-12
0/ 40	Analog Outputs	n/a	n/a	n/a	9-12	9-12
%AQ	Reserved	n/a	1-8	1-8	1-8	

Reserved areas maintain backward compatibility with other XL Series OCS models

5 INSTALLATION DIMENSIONS



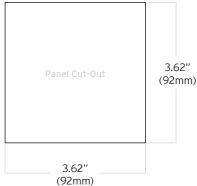

2.26"

5.1. - Installation Procedure

The XLe/t utilizes a clip installation method to ensure a robust and watertight seal to the enclosure. Please follow the steps below for the proper installation and operation of the unit.

- 1. Carefully locate an appropriate place to mount the XLe/t. Be sure to leave enough room at the top of the unit for insertion and removal of the $microSD^{TM}$ card.
- Carefully cut the host panel per the diagram on Page 1, creating a 92mm x 92mm +/-0.1mm opening into which the XLe/t may be installed. If the opening is too large, water may leak into the enclosure, potentially damaging the unit. If the opening is too small, the OCS may not fit through the hole without damage.
- Remove any burrs and or sharp edges and ensure the panel is not warped in the cutting process.
- Remove all Removable Terminals from the XLe/t. Insert the XLe/t through the panel cutout (from the front). The gasket must be between the host panel and the XLe/t.
- Install and tighten the four mounting clips (provided in the box) until the gasket forms a tight seal (max torque 0.8 to 1.13Nm, 7-10 lb-in).
- Reinstall the XLe/t I/O Removable Terminal Blocks. Connect communications cables to the serial port, USB ports, Ethernet port, and CAN port as required.

battery and safety warnings on next page...




6 BATTERY

The XLe/t uses a replaceable non-rechargeable 3V Lithium coin-cell battery (CR2450) to run the Real-Time Clock and to keep the retained register values. This battery is designed to maintain the clock and memory for 7-10 years. Please reference MANO878 providing instructions on how to replace the battery.

7 ANALOG INPUT TRANZORB FAILURE

A common cause of Analog Input Tranzorb Failure on Analog Inputs Model 2, 3, 4, 5 & 6: If a 4- 20mA circuit is initially wired with loop power, but without a load, the Analog inputcould see 24Vdc. This is higher than the rating of the tranzorb. This can be solvedby NOT connecting loop power prior to load connection, or by installing a low-cost PTC in series between the load and Analog input.

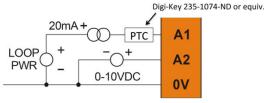

NOTE†: Refers to Model 2 - orange (pg. 1,) Models 3 & 4 - J1 (pg. 2) and Model 5 - 20mA Analog In (pg. 3.)

8 SAFETY

8.1 - WARNINGS

- To avoid the risk of electric shock or burns, always connect the safety (or earth) ground before making any other connections.
- To reduce the risk of fire, electrical shock, or physical injury, it is strongly recommended to
 fuse the voltage measurement inputs. Be sure to locate fuses as close to the source
 as possible.
- Replace fuse with the same type and rating to provide protection against risk of fire and shock hazards.
- In the event of repeated failure, do NOT replace the fuse again as repeated failure indicates
 a defective condition that will NOT clear by replacing the fuse.
 Only qualified electrical personnel familiar with the construction and operation of this
- 5. Only qualified electrical personnel familiar with the construction and operation of this equipment and the hazards involved should install, adjust, operate, or service this equipment. Read and understand this manual and other applicable manuals in their entirety before proceeding. Failure to observe this precaution could result in severe bodily injury or loss of life.

8.2 - FCC COMPLIANCE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference
- This device must accept any interference received, including interference that may cause undesired operation

8.3 - PRECAUTIONS

All applicable codes and standards need to be followed in the installation of this product. Adhere to the following safety precautions whenever any type of connection is made to the module:

- Connect the safety (earth) ground on the power connector first before making any other connections.
- 2. When connecting to the electric circuits or pulse-initiating equipment, open their related breakers.
- 3. Do NOT make connection to live power lines.
- Make connections to the module first; then connect to the circuit to be monitored.
- 5. Route power wires in a save manner in accordance with good practice and local codes.
- Wear proper personal protective equipment including safety glasses and insulted gloves when making connections to power circuits.
- 7. Ensure hands, shoes, and floor are dry before making any connection to a power line.
- Make sure the unit is turned OFF before making connection to terminals.
 Make sure all circuits are de-energized before making connections.
- Before each use, inspect all cables for breaks or cracks in the insulation. Replace immediately if defective.
- 11. Use copper conductors in Field Wiring only, 60/75° C.

9 TECHNICAL SUPPORT

For assistance and manual updates, contact Technical Support at the following locations:

North America

(317) 916-4274 www.hornerautomation.com techsppt@heapg.com


Europe

(+) 353-21-4321-266 www.horner-apg.com techsppt@horner-apg.com


10 PART NUMBER BUILDER

EXAMPLE PART NUMBERS

GLOBAL MODEL NUMBERS

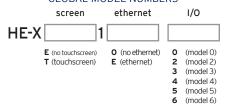

EUROPEAN MODEL NUMBERS

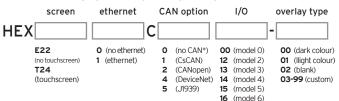

^{*}No CAN is only available on XLe

page 5 of 5