



XLE MODEL



XLT MODEL

XLE & XLT OCS DATASHEET

MODEL 4

24 DC In, 16 DC Out, 2 - 12-bit Analog In

1 TECHNICAL SPECIFICATIONS

1.1 General

Typical power-backlight 100%	173mA @ 10V (1.73W) 132mA @ 24V (3.17W)
Power Backlight Off	-15mA @ 24V (0.36W)
Power Ethernet Models	+35mA @ 10V (0.35W) +20mA @ 24V (0.48W)
Inrush Current	30A for < 1mS
Primary Pwr. Range	10-30VDC
Real Time Clock	Yes, battery backed; lithium coin cell CR2450
Clock Accuracy	+/- 90 Secs/Month
Relative Humidity	5 to 95% Non-condensing
Operating Temp.	-10°C to +60°C
Storage Temp.	-20°C to +70°C
Weight	0.75 lbs/340g (without I/O)
Certifications (UL/CE)	USA: https://hornerautomation.com/certifications/ Europe: http://www.horner-apg.com/en/support/certification.aspx

1.2 User Interface

Display Type	Transflective LCD (outdoor readable)
Resolution	128 x 64 pixels (XLe) 160 x 128 pixels (XLT)
Color	Monochrome
Built-In Storage	16MB
User-Program. Screens	1023 max 50 Objects per page
Backlight	LED
Backlight Lifetime	30,000+hrs
Brightness Control	0-100%(Xlt) On/Off(X- le) via system register
Screen Update Rate	Program dependant
Number of Keys	20 (XLe) 5 (XLT)
Touchscreen (XLT)	Resistive 1,000,000+ touch life

1.3 Connectivity

Serial Ports	RS-232 full handshaking or RS-485 half duplex on first Modular Jack (MJ1) RS-232 or RS-485 on second Modular Jack (MJ2)
USB mini-B	Programming only
CAN	1x CAN Port, Isolated 1KV
CAN Protocols	CsCAN, CANopen, DeviceNet, J1939
Ethernet	Ethernet versions only
Ethernet Protocols	TCP/IP, Modbus TCP, FTP, SRTP, EGD, ICMP, ASCII
Remote I/O	SmartRail, SmartStix, SmartBlock, SmartMod
Removable Memory	MicroSD (SDHC, SDXC IN FAT32 format, support for 32GB max. Application Updates, Datalogging, more
Audio (XLT only)	Beeper, System or Software Controlled

1.5 Inputs/Outputs

Model	DC In	DC Out	Relays	HS In	HS Out	mA/V In	mA/V RTD/T	mA/V Out
Model 0	-	-	-	-	-	-	-	-
Model 2	12	-	6	4	-	4	-	-
Model 3	12	12	-	4	2	2	-	-
Model 4	24	16	-	4	2	2	-	-
Model 5	12	12	-	4	2	-	2	2
Model 6	12	12	-	4	2	-	6	4

There are 4 high-speed inputs of the total DC Inputs. There are 2 high-speed outputs of the total DC outputs. Model 2, 3 & 4 feature 12-bit Analog Inputs. Model 5 features 14/16-bit Analog Inputs. High-speed Outputs can be used for PWM and Pulse Train Outputs, currently limited to <10kHz. (Model 6 limited to <65kHz). Model 6 features a 16 bit Analog Input.

High-Speed Inputs		High-Speed Outputs	
Number of Counters	4	Modes Supported	Stepper, PWM
Maximum Frequency	500 kHz each		
Accumulator Size	32-bits each		
Modes Supported	Totalizer, quadrature, pulse measurement, frequency measurement, set-point controlled outputs		

technical specifications continued...

1.6 Digital DC Inputs


Inputs per Module	24 Including 4 Configurable HSC Inputs	
Commons per Module	1	
Input Voltage Range	12 VDC / 24 VDC	
Absolute Max. Voltage	35 VDC Max.	
Input Impedance	10 kΩ	
Input Current: Upper Threshold Lower Threshold	Positive Logic: 0.8 mA 0.3 mA	Negative Logic: -1.6 mA -2.1 mA
Max. Upper Threshold	8 VDC	
Min. Lower Threshold	3 VDC	
OFF to ON Response	1 mS	
ON to OFF Response	1 mS	
High Speed Counter Max Freq*	10 kHz	

*See I/O info below for detail regarding HSC and PWM

1.9 J1 (Orange) Name

I2	IN1
I2	IN2
I3	IN3
I4	IN4
I5	IN5
I6	IN6
I7	IN7
I8	IN8
H1	HSC1 / IN9
H2	HSC2 / IN10
H3	HSC3 / IN11
H4	HSC4 / IN12
A1	Analog IN1
A2	Analog IN2
0V	Common

J1 (Orange) Positive Logic Digital & Analog In

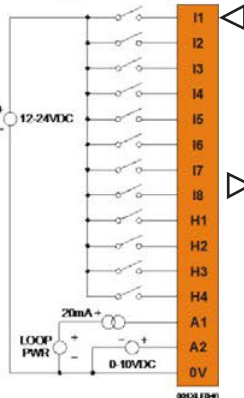


1.7 Digital DC Outputs

Outputs per Module	16 Including 2 Configurable PWM Outputs
Commons per Module	1
Output Type	Sourcing / 10 kΩ Pull-Down
Absolute Max. Voltage	28 VDC Max.
Output Protection	Short Circuit
Max. Output Current/Point	0.5 A
Max. Total Current	4 A Continuous
Max. Output Supply Voltage	30 VDC
Min. Output Supply Voltage	10 VDC
Max. Voltage Drop at Rated Current	0.25 VDC
Max. Inrush Current	650 mA per Channel
Min. Load	None
OFF to ON Response	1 mS
ON to OFF Response	1 mS
PWM Out	10 kHz
Output Characteristics	Current Sourcing (Pos. Logic)

1.10 J3 (Orange) Name

I13	IN13
I14	IN14
I15	IN15
I16	IN16
I17	IN17
I18	IN18
I19	IN19
I20	IN20
I21	IN21
I22	IN22
I23	IN23
I24	IN24
0V	Common

J3 (Orange) Positive Logic Digital In

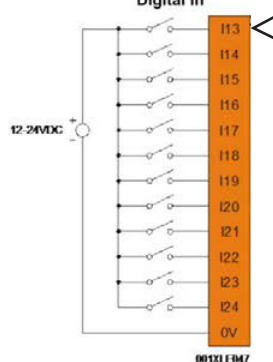


1.8 Analog Outputs

Number of Channels	2
Input Ranges Safe Input Range Input Impedance (Clamped @ -0.5 VDC to 12 VDC)	0 - 10 VDC 0 - 20 mA 4 - 20 mA -0.5 V to +12V Current Mode: 100Ω Voltage Mode: 500Ω
Nominal Resolution %AI full scale Max. Over-Current	10 Bits 32,000 counts 35 mA
Conversion Speed	All channels converted once per ladder scan
Max. Error @25° C (excluding zero)	4-20 mA 1.00% 0-20 mA 1.00% 0-10 VDC 0.50%
Filtering	160 Hz hash (noise) filter 1/28 scan digital running average filter

1.11 J4 (Orange) Name

Q16	OUT16
Q15	OUT15
Q14	OUT14

J4 Orange Positive Logic Digital Out

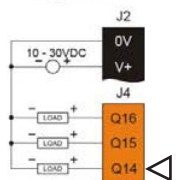


Wiring Details:

Solid/Stranded wire - 12-24 awg (2.5-0.2mm²).
Strip length - 0.28" (7mm).
Torque rating: 4.5 - 7 lb-in (0.50 - 0.78 N-m).

1.12 J2 (Black) Name

0V	Common
V+	V+
NC	OUT 13
Q12	OUT 12
Q11	OUT 11
Q10	OUT 10
Q9	OUT 9
Q8	OUT 8
Q7	OUT 7
Q6	OUT 6
Q5	OUT 5
Q4	OUT 4
Q3	OUT 3
Q2	OUT 2 / PWM 2
Q1	OUT 1 / PWM 1

J2 Black Positive Logic Digital Out

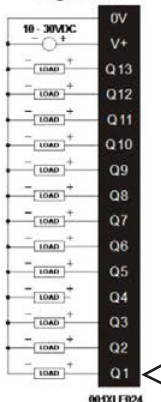

Jumper Setting Details

Location of I/O jumpers (JP1 & JP3) and wiring connectors (J1, J2, J3 & J4) with back cover removed.

JP1 Digital DC Inputs

Positive Logic Negative Logic

Default

JP3 Analog Inputs

20mA 10VDC

A1 1 2 A1 1 □ □ ;

A2 3 4 A2 3 □ □ ;

Note: The Cscape Module Setup configuration must match the selected I/O (JP) jumper settings.

Note: When using JP3 (A1-A2), each channel can be independently configured.




2 WIRING & CONNECTORS

3 COMMUNICATIONS


2.1 - Port Connectors



1. Function Keys
2. Touchscreen
3. Navigation Keys
4. USB Mini-B Port
5. High Capacity microSD Slot
6. RS232/RS485 Serial Ports (2)
7. Wide-Range DC Power
8. CAN Port
9. Ethernet LAN Port (optional)
10. Optional Built-In I/O
11. Configuration Switches
12. Mounting Clip Locations
13. DIN Rail Clip
14. Softkeys

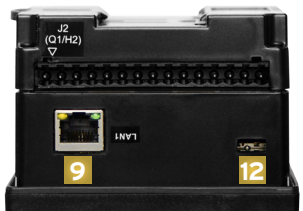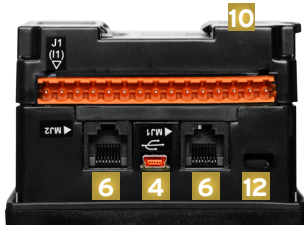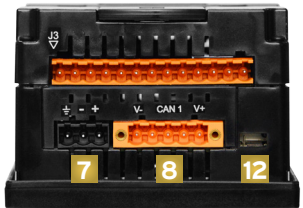

2.2 - Power Wiring

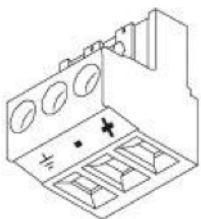

Primary Power Port Pins		
PIN	SIGNAL	DESCRIPTION
1	Ground	Frame Ground
2	DC-	Input Power Supply Ground
3	DC+	Input Power Supply Voltage

DC Input / Frame


Solid/Stranded wire; 12-24 awg (2.5-0.2mm). Strip length - 0.28" (7mm).

Torque rating: 4.5 - 7 lb-in (0.50 - 0.78 N-m).

DC- is internally connected to I/O V-, but is isolated from CAN V-.

A Class 2 power supply must be used.

3.1 - CAN Communications

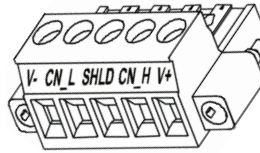

CAN Pin Assignments

PIN	SIGNAL	DESCRIPTION	DIRECTION
1	V-	CAN Ground - Black	-
2	CN L	CAN Data Low - Blue	IN/OUT
3	SHLD	Shield Ground - None	-
4	CN H	CAN Data High - White	IN/OUT
5	V+ (NC)	No Connect - Red	-


CAN

Solid/Stranded wire; 12-24 awg (2.5-0.2mm). Strip length - 0.28" (7mm).

Locking spring-clamp, two-terminators per conductor.

Torque Rating: 4.5 lb-in (0.50 N-m). V+ pin is not internally connected, the SHLD pin is connected to Earth ground via a 1 MΩ resistor and 10 nF capacitor.

3.2 - Serial Communications

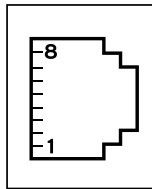


MJ1 PINS

PIN	SIGNAL	DIRECTION
8	TXD	OUT
7	RXD	IN
6	0V	GROUND
5	+5V at 60mA	OUT
4	RTS	OUT
3	CTS	IN
2	RX-/TX-	IN/OUT
1	RX+/TX+	IN/OUT

MJ1: RS-232 w/full handshaking or RS-485 half-duplex

RS-485 termination via switches; biasing via software

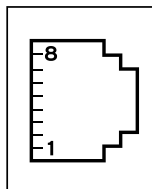

MJ2 PINS

PIN	SIGNAL	DIRECTION
8	232 TXD	OUT
7	232 RXD	IN
6	0 V	Ground
5	+5V@60mA	OUT
4	485 TX-	OUT
3	485 TX+	OUT
2	485 RX- or RX/TX-	IN or IN/OUT
1	485 RX+ or RX/TX+	IN or IN/OUT


MJ2 SERIAL PORT

MJ2: RS-232 or RS-485 half or full-duplex, software selectable

RS-485 termination via switches; biasing via software

communications continued...


3.4 - Dip Switches

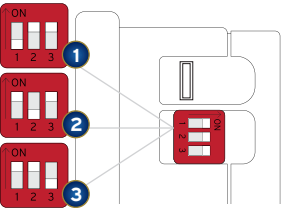

1.9 DIP SWITCHES			
PIN	NAME	FUNCTION	DEFAULT
1	MJ1 RS-485 Termination	ON = Terminated	OFF
2	MJ2 RS-485 Termination	ON = Terminated	OFF
3	Bootload	Always Off	OFF

The DIP switches are used to provide a built-in termination to both the MJ1 port and MJ2 port if needed. The termination for these ports should only be used if this device is located at either end of the multidrop/daisy-chained RS-485 network.

3.5 - Ethernet Communications

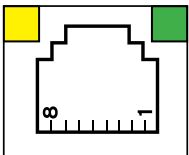

Green LED indicates link - when illuminated, data communication is available.

Yellow LED indicates activity - when flashing, data is in transmission.

4 BUILT-IN I/O



4.1 - 5. Built-in I/O (Model 2, 3, 4, 5 & 6)

All XLe and XLt models (except model 0) feature built-in I/O. The I/O is mapped into OCS Register space, in three separate areas - Digital/Analog I/O, High-Speed Counter I/O, and High-speed Output I/O. Digital/Analog I/O location is fixed starting at 1, but the High-speed Counter and High-speed Output references may be mapped to any open register location. For more details on using the High-Speed Counter and High-Speed Outputs, see the XLe/XLt OCS User's Manual (MAN0878).

FIXED ADDRESS	DIGITAL/ANALOG I/O FUNCTION	MODEL 2	MODEL 3	MODEL 4	MODEL 5	MODEL 6
%I	Digital Inputs	1-12	1-12	1-24	1-12	1-12
	Reserved	13-32	13-31	25-31	13-31	13-31
	ESCP Alarm	n/a	32	32	32	32
%Q	Digital Outputs	1-6	1-12	1-16	1-12	1-12
	Reserved	7-24	13-24	17-24	13-24	13-24
%AI	Analog Inputs	1-4	1-2	1-2	1-2	1-4; 33-38
	Reserved	5-12	3-12	3-12	3-12	n/a1-12
%AQ	Analog Outputs	n/a	n/a	n/a	9-12	9-12
	Reserved	n/a	1-8	1-8	1-8	

Reserved areas maintain backward compatibility with other XL Series OCS models

5 INSTALLATION DIMENSIONS

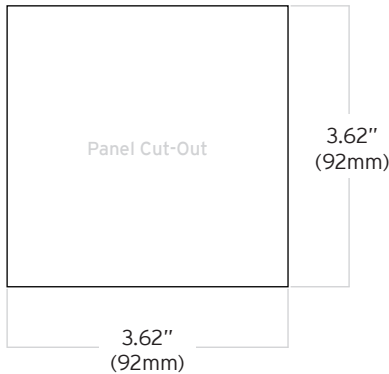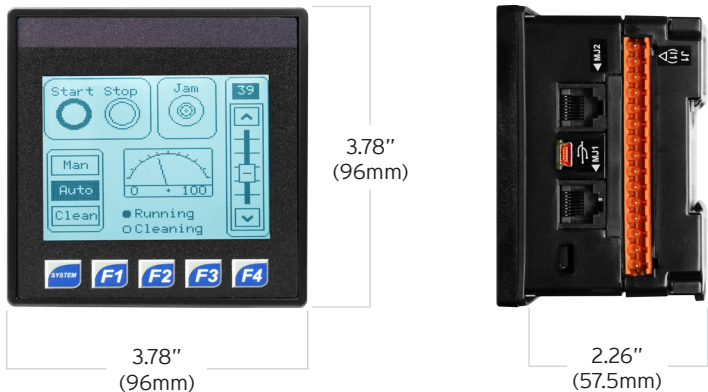

5.1 - Installation Procedure

The XLe/t utilizes a clip installation method to ensure a robust and watertight seal to the enclosure. Please follow the steps below for the proper installation and operation of the unit.

- Carefully locate an appropriate place to mount the XLe/t. Be sure to leave enough room at the top of the unit for insertion and removal of the microSD™ card.
- Carefully cut the host panel per the diagram on Page 1, creating a 92mm x 92mm +/-0.1mm opening into which the XLe/t may be installed. If the opening is too large, water may leak into the enclosure, potentially damaging the unit. If the opening is too small, the OCS may not fit through the hole without damage.
- Remove any burrs and or sharp edges and ensure the panel is not warped in the cutting process.
- Remove all Removable Terminals from the XLe/t. Insert the XLe/t through the panel cutout (from the front). The gasket must be between the host panel and the XLe/t.
- Install and tighten the four mounting clips (provided in the box) until the gasket forms a tight seal (max torque 0.8 to 1.13Nm, 7-10 lb-in).
- Reinstall the XLe/t I/O Removable Terminal Blocks. Connect communications cables to the serial port, USB ports, Ethernet port, and CAN port as required.


battery and safety warnings on next page...

6 BATTERY

The XLe/t uses a replaceable non-rechargeable 3V Lithium coin-cell battery (CR2450) to run the Real-Time Clock and to keep the retained register values. This battery is designed to maintain the clock and memory for 7-10 years. Please reference MAN0878 providing instructions on how to replace the battery.

7 ANALOG INPUT TRANZORB FAILURE

A common cause of Analog Input Tranzorb Failure on Analog Inputs Model 2, 3, 4, 5 & 6: If a 4- 20mA circuit is initially wired with loop power, but without a load, the Analog input could see 24Vdc. This is higher than the rating of the tranzorb. This can be solved by NOT connecting loop power prior to load connection, or by installing a low-cost PTC in series between the load and Analog input.

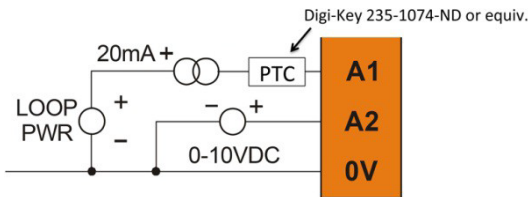

NOTE†: Refers to Model 2 - orange (pg. 1), Models 3 & 4 - J1 (pg. 2) and Model 5 - 20mA Analog In (pg. 3.)

8 SAFETY

8.1 - WARNINGS

- To avoid the risk of electric shock or burns, always connect the safety (or earth) ground before making any other connections.
- To reduce the risk of fire, electrical shock, or physical injury, it is strongly recommended to fuse the voltage measurement inputs. Be sure to locate fuses as close to the source as possible.
- Replace fuse with the same type and rating to provide protection against risk of fire and shock hazards.
- In the event of repeated failure, do NOT replace the fuse again as repeated failure indicates a defective condition that will NOT clear by replacing the fuse.
- Only qualified electrical personnel familiar with the construction and operation of this equipment and the hazards involved should install, adjust, operate, or service this equipment. Read and understand this manual and other applicable manuals in their entirety before proceeding. Failure to observe this precaution could result in severe bodily injury or loss of life.

8.2 - FCC COMPLIANCE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference
- This device must accept any interference received, including interference that may cause undesired operation

8.3 - PRECAUTIONS

All applicable codes and standards need to be followed in the installation of this product. Adhere to the following safety precautions whenever any type of connection is made to the module:

- Connect the safety (earth) ground on the power connector first before making any other connections.
- When connecting to the electric circuits or pulse-initiating equipment, open their related breakers.
- Do NOT make connection to live power lines.
- Make connections to the module first; then connect to the circuit to be monitored.
- Route power wires in a safe manner in accordance with good practice and local codes.
- Wear proper personal protective equipment including safety glasses and insulated gloves when making connections to power circuits.
- Ensure hands, shoes, and floor are dry before making any connection to a power line.
- Make sure the unit is turned OFF before making connection to terminals.
- Make sure all circuits are de-energized before making connections.
- Before each use, inspect all cables for breaks or cracks in the insulation. Replace immediately if defective.
- Use copper conductors in Field Wiring only, 60/75° C.

9 TECHNICAL SUPPORT

For assistance and manual updates, contact Technical Support at the following locations:

North America
(317) 916-4274
www.hornerautomation.com
techsppt@heapg.com

Europe
(+) 353-21-4321-266
www.horner-apg.com
techsppt@horner-apg.com

10 PART NUMBER BUILDER

EXAMPLE PART NUMBERS

GLOBAL MODEL NUMBERS

	screen	ethernet	I/O
HE-X	<input type="text"/>	<input type="text"/>	<input type="text"/>
	E (no touchscreen) T (touchscreen)	O (no ethernet) E (ethernet)	0 (model 0) 2 (model 2) 3 (model 3) 4 (model 4) 5 (model 5) 6 (model 6)

EUROPEAN MODEL NUMBERS

	screen	ethernet	CAN option	I/O	overlay type
HEX	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
	E22 (no touchscreen) T24 (touchscreen)	0 (no ethernet) 1 (ethernet)	0 (no CAN*) 1 (CsCAN) 2 (CANopen) 4 (DeviceNet) 5 (J1939)	00 (model 0) 12 (model 2) 13 (model 3) 14 (model 4) 15 (model 5) 16 (model 6)	00 (dark colour) 01 (light colour) 02 (blank) 03-99 (custom)

*No CAN is only available on XLe